




LT50/ST50 Wired Motor Instructions

LT50/60 and LT50RH

Stop Position 1


Depending upon type of installation

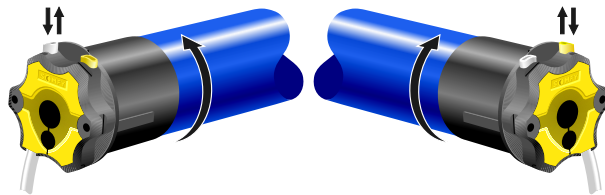

Motor on Left

Motor on Right

Stop Position 2

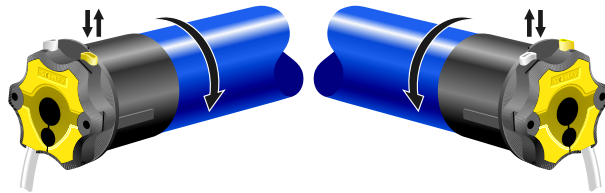

Motor on Left

Motor on Right

Setting of Upper and Lower Positions for LT50/60 motors

- Remove the protective cap over the limit switch adjustment buttons.
- Depress Both limit switch adjustment buttons

Stop Position 1

- Bring end product into the desired stop position 1 (direction of rotation 1)
- Release the limit switch adjustment button that lies in the direction of rotation 1 by pressing it down again. The Stop position is now set.

Stop Position 2

- Bring end product into stop position 2 (direction of rotation 2)
- Release the limit switch adjustment button that lies in the direction of rotation 2 by pressing it down again. The Stop position is now set.

Attach the protective cap over the limit switch adjustment buttons.

Adjusting Stop Positions

- Press the limit switch adjustment button that lies in the direction of rotation.
- Bring the end product into the desired stop position.
- Release the limit switch adjustment button by pressing it down again.