

# Glydea RTS Programming Instructions

## DESCRIPTION

### 2 motors: Glydea 35 RTS, Glydea 60e RTS

- AC 120 V with integrated power supply – 10 foot cable
- Motor placement left or right and/or upside down installation
- New touch motion (only on the 60e)
- Comes in Dry contact with optional RTS plug-in module

### Connect Power To Motor

Motors are equipped with a Nema power plug.

### Programming the RTS control point

**STEP 1:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously on the RTS transmitter until the drapery jogs.


**STEP 2:** Briefly press OPEN/UP  or CLOSE/DOWN , the drapery automatically runs to record both hard stop positions.

### Checking the direction of operation: Glydea 60e RTS only

**STEP 1:** Press the RTS transmitter OPEN/UP  button.

–If the drapery opens, the direction of rotation of correct.

–If the drapery closes, the direction of rotation is incorrect: move to the next step.

**STEP 2:** Press the  (STOP) button until the drapery jogs: the direction of rotation has been modified.

**STEP 3:** Press the OPEN/UP  button to check the direction of rotation.



### Recording the RTS Transmitter:

Press the PROGRAMMING BUTTON on the back of the RTS transmitter until the motor jogs. The RTS transmitter is permanently recorded.


### Back Release Setting: Glydea 35 RTS Only



It is required to set a back release position on thick draperies in order to allow proper manual operation.

Press briefly the  OPEN/UP button to move the drapery to the OPEN/UP end limit


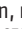


**STEP 1:** Press and hold the  and CLOSE/DOWN  buttons simultaneously until the drapery jogs. Press the CLOSE/DOWN  button to re-adjust the back release position.

**STEP 2:** To confirm the new back release position, press and hold the  (STOP) button until the drapery jogs. For accuracy, the positioning must be done in one movement. If the position is not satisfactory, repeat the entire procedures again.

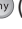
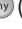
**STEP 3:** To erase the back release position, set it on the hard stop limit.

### Setting Intermediate Preferred "My" Position: Glydea 60e RTS Only

#### Recording "MY" favorite position:

To set the  (STOP) position, move the drapery to the desired intermediate position with the OPEN/UP  or CLOSE/DOWN  buttons then press the  (STOP) button until the drapery jogs.

#### Delete the "MY" position:



To delete the  (STOP) position, move to the current  (STOP) position, then press the (STOP) button until the drapery jogs.

### Adjusting The Limits: Glydea 60e RTS Only

#### OPEN/UP Limit Adjustment:

**STEP 1:** Press the OPEN/UP  button, to move the drapery to the limit to be re-adjusted.

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press and hold the OPEN/UP  or CLOSE/DOWN  buttons to move the drapery to the new desired position.

**STEP 4:** To confirm the new limit, press and hold the  (STOP) button until the drapery jogs.




## BEFORE YOU BEGIN

Manually move drapery to a middle position along the track. This allows for movement of the motor in either direction.


### Adjusting The Limits: Glydea 60e RTS Only

#### CLOSE/DOWN Limit Adjustment:

**STEP 1:** Press the CLOSE/DOWN  button to move the drapery to the limit to be re-adjusted.

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press and hold the OPEN/UP  or CLOSE/DOWN  buttons to move the drapery to the new desired position.

**STEP 4:** To confirm the new limit, press and hold the  (STOP) button until the drapery jogs.

### Modifying the motor Rotation Direction

**STEP 1:** Press OPEN/UP  or CLOSE/DOWN  to move the drapery away from the limit:

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press the  (STOP) button until the drapery jogs to reverse the rotation direction.

### Dry Contact Mode Setting

**STEP 1:** Press OPEN/UP  or CLOSE/DOWN  to move the drapery away from the limit:


**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press the  (STOP) and CLOSE/DOWN  buttons simultaneously until the drapery jogs to change the ergonomoy.

### Activating the Touch Motion Feature: Glydea 60e RTS only

**NOTE: The Glydea by default does not have the touch motion feature activated.**

**STEP 1:** Press OPEN/UP  or CLOSE/DOWN  to move the drapery away from the limit.



**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  button simultaneously until the draperies jogs.

**STEP 3: NOTE – Be sure to only follow the steps associated with your desired sensitivity setting.**

#### To Activate the Standard Sensitivity Setting

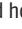

Press the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs (total of two jogs) then proceed to Step 4.

#### To Activate the Low Sensitivity Setting

Press the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs once. Then Press the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs again (total of three jogs). Proceed to Step 4.

**STEP 4:** Press the  (STOP) button until the drapery jogs to confirm the setting.

### Adjustment Of Speed Setting: Glydea 60e RTS only

**STEP 1:** Press and hold both the  (STOP) and OPEN/UP  buttons simultaneously until the drapery starts to open and close automatically without stopping.

**STEP 2:** Press OPEN/UP  to increase speed, CLOSE/DOWN  to decrease speed

**STEP 3:** Press the  (STOP) button until the drapery jogs to confirm the setting.

### Adding/Deleting RTS



**STEP 1:** Press and hold the PROGRAMMING BUTTON of either the motors receiver or a transmitter already in memory until the drapery jogs. The motor is now in **PROGRAMMING MODE**.

**STEP 2:** Briefly press the PROGRAMMING BUTTON of the transmitter to add or delete, until the drapery jogs.

### Deleting Previous Setting

To delete all the transmitters programmed and retain limit setting, press and hold the receivers PROGRAM BUTTON until the drapery jogs twice.

Resetting completely the memory of the motor, press the receiver PROGRAM BUTTON until the drapery jogs 3 times. All the settings are erased.

