







Triathlon Shade Battery issues and blink codes.

LED	Description	LED Cycle	LED Blink Pattern
	Batteries are too low and need to be replaced. The shade cannot move.	5 seconds	 1 red blink every 5 seconds
	<i>While shade moves</i> - Shade has low batteries and only a few motions left.	On While Moving	 On while shade is moving, then off
	<i>Shade won't move</i> - Shade heard the button press, but the batteries are too low to move.	5 seconds	 On 5 seconds, then off