Note: Refer to instructions included inside control option box, for programming instructions.
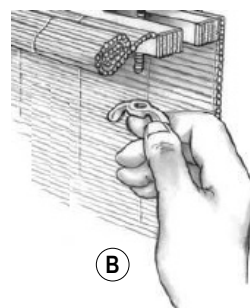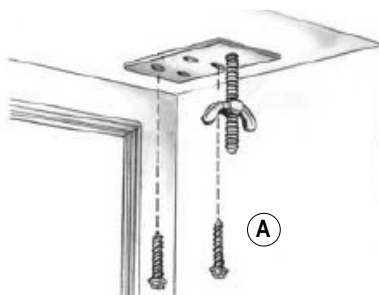
Inside Mount

Flush Mounting Depth Requirement: 3-1/4"
Min. Mounting Depth Requirement: 1-1/2"

First, hold the shade inside the window frame. Center the shade so the space between the end of the headrail and edges of the window frame are equal. *The headrail of your shade has been slotted for the bracket*. Space brackets evenly based on the slotted positions. Using the installation bracket as a template, measure to the center of the brackets and mark the hole locations with a pencil for drilling. Then, install the brackets with screws provided (**A**). Make sure brackets are leveled and aligned with one another. Finally, remove the wing nuts from the bolts and hold the shade with the bracket bolts coming through the routed slots on each end of the headrail (**B**). Reinstall the wing nuts onto the bolts and hand tighten.
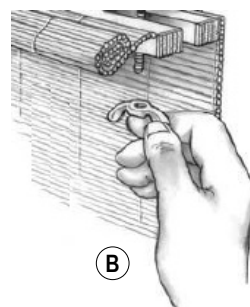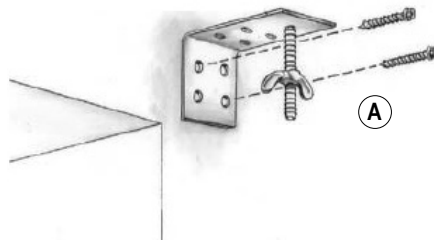
Outside Mount

Min. Flat Vertical Surface: 1"

OPTIONAL:

Extension Brackets   **Spacer Blocks**

First, center the shade over the window opening at the desired height. Space brackets evenly based on route position on the headrail. Using the installation bracket as a template, measure to the center of the brackets and mark the hole locations with a pencil for drilling. *Using the spacer block if needed to extend out the bracket to avoid obstruction of window trim*. Then, install the brackets with screws provided (**A**). Make sure brackets are level and align with one another. Finally, Remove the wing nuts from the bolts and hold the shade with the bracket bolts coming through the routed slots on each end of the headrail, reinstall the wing nuts onto the bolts and hand tighten (**B**).

Child Safety

⚠ **WARNING/ADVERTENCIA**

5.1.3   Rev. 5/18   Print 5/18

Window Blind Cord Can **STRANGLE** Your Child. To prevent strangulation, purchase cordless products or products with inaccessible cords.

La cuerda de la persiana puede **ESTRANGULAR** a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.

1021061