

THE FINIAL COMPANY™

Finial Wall Mount Adaptor Installation Instructions

Finial Wall Mount Adaptor - 1³/₈"

Thank you for purchasing your new decorative Finial Wall Mount Adaptors. With proper installation and care, they will provide you many years of beauty and trouble-free use. Clean with a soft cloth. Do not use harsh or abrasive cleaning supplies or polishes which may damage the finish.


Tools Needed for Installation (not included):

- Tape Measure
- Phillips Screwdriver
- Pencil
- Drill with ³/₁₆" drill bit to pre-drill for plastic expansion anchors
- Level (recommended)




Components included for each Finial Wall Mount Adaptor:

- 1³/₈" Adaptor
- Drapery Pin Hook (optional for assembly)
- Screw
- Plastic anchor
- Finial (sold separately)

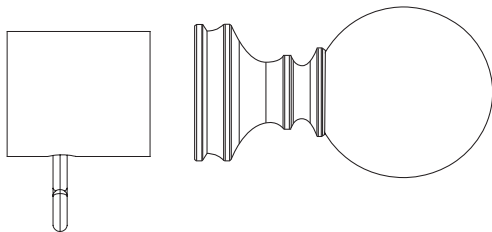


Finial Wall Mount Adaptor Installation

1. Locate all brackets and correct anchors for your wall type.

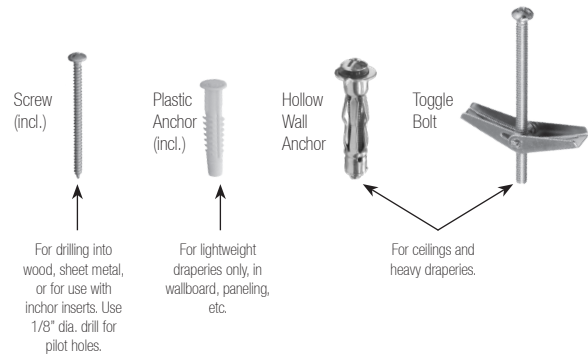

Determine the desired height and width based on the drapery treatment. Be certain to make the appropriate allowance for the decorative hardware. It is recommended that the Finial Wall Mount Adaptor be installed approximately 2" or more inches beyond the window frame.

NOTE: Finial Wall Mount Adaptors can be added in multiple locations to create unique drapery configurations, as shown below:

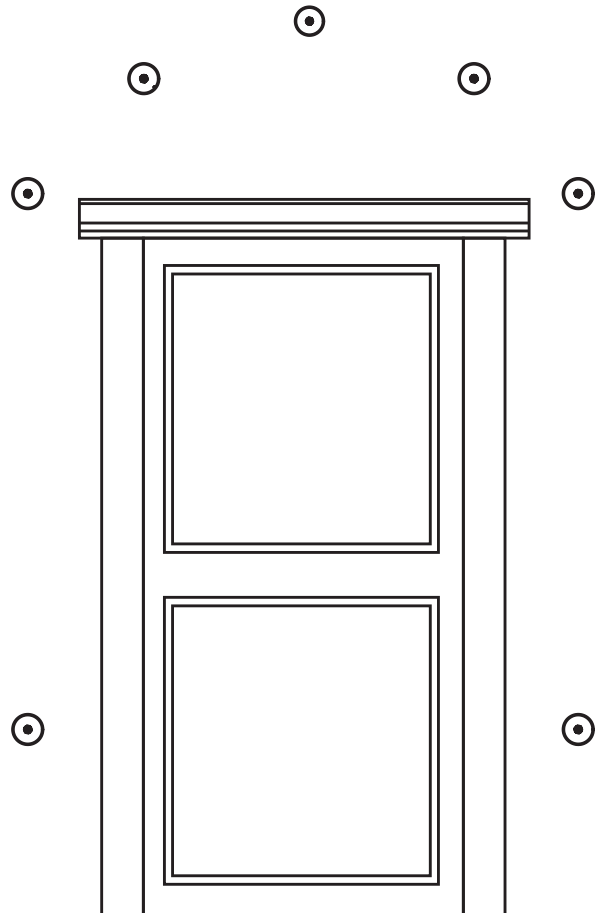


Tips for Successful Installation


Securely attach all Finial Wall Mount Adaptors to the mounting surface. If you do not locate and install into wood studs, use the proper wall fasteners and / or plastic anchors designed for your particular mounting surface (fasteners are included). When drilling into metal, use self-tapping screws (not included).

Make certain all Finial Wall Mount Adaptors line up evenly by measuring their placement.


2. Once the Finial Wall Mount Adaptor position is determined, mark the location on the wall for the anchors or screws.
3. If using plastic expansion anchors, pre-drill holes using $\frac{3}{16}$ " drill bit. If drilling directly into a stud or wood trim, pre-drill holes with $\frac{3}{32}$ " drill bit.
4. Hook installation is an option depending on desired drapery style. When using the hook option assemble the hook through the end of the $1\frac{3}{8}$ " pole, as shown below.

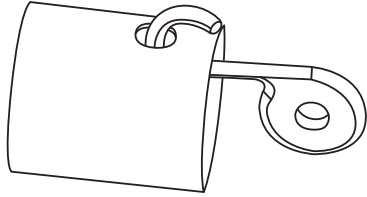


5. Then rotate the hook and $1\frac{3}{8}$ " pole until both holes line up as shown below.

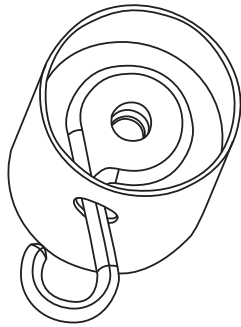


6. To install the mount screw, place it through the center of the $1\frac{1}{2}$ " pole & the optional hook, as shown below.

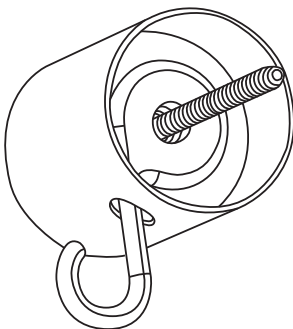

7. Attach the Finial Wall Mount Adaptor to the wall by holding Finial Wall Mount Adaptor assembly above the hook hole location. Fingers placed below this point or on the wall can become pinched between the wall and the Wall Mount Adaptor Assembly.

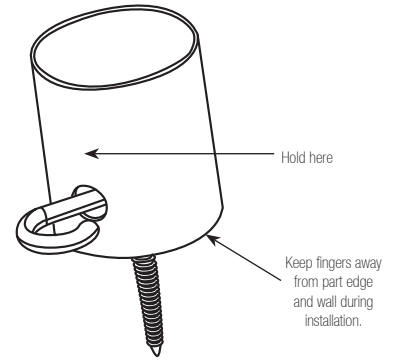

8. Locate the Finial Wall Mount Adaptor screw and mount assembly to the wall, as shown below.

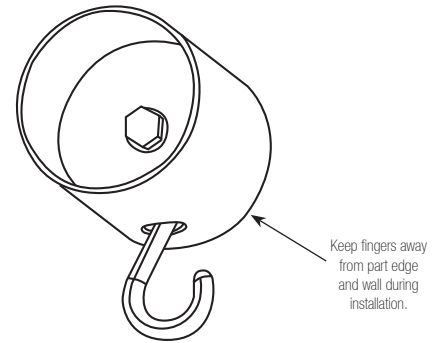

9. Assemble the Finial (Sold Separately) to the Finial Wall Mount Adaptor by placing the finial over the $1\frac{3}{8}$ " pole. To secure the finial to the pole tighten the 4 mm set screw to the pole.

