
To set limits using a Lutron Shade Keypad.

Setting Limits on Sivoia QS / Palladiom Wired shades using a wired keypad


This procedure is used when you have Sivoia QS shades wired for power and communication back to a shading power panel. When you have keypads also wired to this panel, you can manually set limits from these keypads. This is particularly helpful in scenarios where shades are hard to physically reach or accessing the shade drive buttons is inconvenient.

Setting limits from a Keypad:


1. Press and hold Open and Raise simultaneously for 5 seconds




2. Tapping Open selects the next window treatment, Close selects the next window treatment




3. Hold Raise or Lower to adjust window treatment position




4. Press and hold Open for 5 seconds to store the open limit or Close for 5 seconds to store the close limit



5. Press and hold Open and Raise simultaneously for 5 seconds to exit



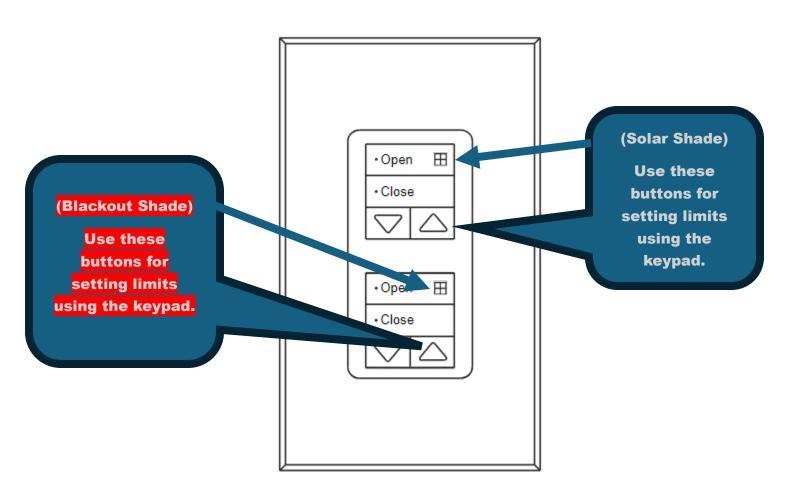

QSWS2-2RLDI-SW-E01

Dual 2-button with raise/lower